










What to do if...
What to do if...

	A tire punctures	P. 370	If you have a flat tire
	The engine does not start	P. 380	If the engine will not start
		P. 50	Engine immobilizer system
		P. 383	If the battery is discharged
	The shift lever cannot be moved out	P. 381	If the shift lever cannot be shifted from P
	The engine coolant temperature gauge enters the red zone	P. 386	If your vehicle overheats
	Steam can be seen coming from under the hood		
	The key is lost	P. 382	If you lose your keys
	The battery runs out	P. 383	If the battery is discharged
	The doors cannot be locked	P. 7	Side doors
		P. 12	Back door
	The horn begins to sound	P. 52	Alarm
	The vehicle is stuck in mud or sand	P. 388	If the vehicle becomes stuck



The warning light or indicator light comes on

P. 363

If the warning light turns on



■ Warning lights



Brake system warning light

or



P. 363



Malfunction indicator lamp

or



P. 364



"ABS" warning light

or



P. 364



Driver's seat belt reminder light

P. 366



Front passenger's seat belt reminder light

P. 366



Low fuel level warning light

P. 366



Rear light failure warning light

P. 364



SRS warning light

P. 364



Low engine oil pressure warning light

P. 364



Open door warning light

P. 366



Tire pressure warning light

P. 364, 366



Charging system warning light

P. 364



Automatic headlight leveling system warning light

P. 364



Automatic transmission fluid temperature warning light

P. 364



Low washer fluid warning light

P. 366



Dynamic laser cruise control master
warning light

P.132



Engine oil replacement
reminder light

P.366